



STOP READ THIS WARNING!

Make sure you test fit these exhaust components BEFORE any cutting, welding or unnecessary bending is done. Once modified, the components of the system are NOT RETURNABLE.

If you are unsure of the proper installation procedures or fitment, please contact a qualified exhaust shop or call our tech lines toll free at 800-421-3890 or visit our installation gallery at: www.pypesexhaust.com/install

One of our experienced exhaust techs will be glad to assist you in any way. Thanks and enjoy you new...

Pypes Performance Exhaust!

SCROLL DOWN FOR INSTRUCTIONS



SFM62V/ SFM62VB/SFM65/SFM68/SFM68B

Stainless Steel header/cross-member back exhaust system for
2005-10 Ford Mustangs



Pypes Performance Exhaust
2705 Clemens Rd B103 Hatfield, PA 19440
www.pypesexhaust.com 800-421-3890

SFM62V: 05-10 GT 409 Stainless Cat-back w/ Violator Axle-back.

SFM62VB: 05-10 GT 409 SS Cat-back w/ Violator Axle-back w/Black tips

SFM65: 05-10 V6 409 Stainless cat-back when using GT take-offs

SFM68: 05-10 V6 409 Stainless complete cat-back dual exhaust.

SFM68B: 05-10 V6 409 Stainless complete cat-back dual exhaust w/Black mufflers & tips

Thanks again for purchasing your new stainless steel Pypes Performance Exhaust 05-07 Ford Mustang GT or V6. Please be sure to confirm all the components in the kit were received in your shipment before beginning installation. If you find any components missing, please contact our office at 800-421-3890 for replacement. Installation of these kits will require a few simple tools: jack stands, 13mm & 15mm wrenches, cutting device and penetrating oil. For a quicker and tighter installation, air tools are recommended. Technical assistance is available both online at www.pypesexhaust.com or 800-421-3890.

1. Begin by placing the vehicle on a lift or four jack stands at maximum height. This will aid in an easier installation.

2. Before unbolting any part of your existing system, match up the two hangers on your new x-pipe to the existing H or Y pipe mounts on the car. You will need to mark where the cuts are to be made on your factory H or Y pipe. This line should be 8-9 inches from the factory cats. Once you have checked the measurements, make the cuts through both driver and passenger pipes.

3. You can now remove your factory Y or H pipe section. V6 owners can also remove the single mid pipe and single axle back. V8 owners will need to remove both mid pipes and the axle-back mufflers.

4. It's time to install your new Cat-back system. Begin by installing the two band clamps on to the after-cat x-pipe. Place the x-pipe hangers in the factory mounts near the transmission if they are present. Snug the clamps but do not tighten yet. Next install the two mid-pipes and the band clamps connecting the mid-pipes to the new x-pipe. Snug also but do not tighten.


5. Next install the new axle-back system. Begin by installing the two band clamps on to the muffler necks. Place the factory hangers in the right configuration on to the welded wire forms on the axle-backs. Slide the muffler necks on to the mid-pipes, and then bolt the hangers on to the frame rails. Once all the hanger bolts are tight, make sure the tip is adjusted properly in the bumper cut-out (see below for V6 owners) and now tighten the band clamps on your x-pipe mid-pipes and axle-back...

6. For V6 owners: Use the passenger side as a reference for your new GT hanger placement. Your car has all the threaded nuts welded into the frame rails. Proper placement is necessary. Also if you are still utilizing your factory V6 rear bumper cover, use the template provided to trim out the opening on the driver's side. See rear of this sheet.

7. Check all the connection points periodically, as they may come loose.

Note: If you find the new tips are not aligned properly in the bumper cutouts, you may need to adjust your mid-pipes by loosening the two band clamps located where your factory h-pipe meets the mid-pipes. A slight rotation of the mid pipes will allow for the best fit.

- (A) After-Cat X-pipe (SFM65 & SFM68 only)
 - (B) Mid-pipes
 - (C) Axle-back System
- Included in SFM65 & 68 systems** are (2) HVC25 2.25" clamp, (2) HVC65 2.5" butt clamp & (1) muffler hanger kit.

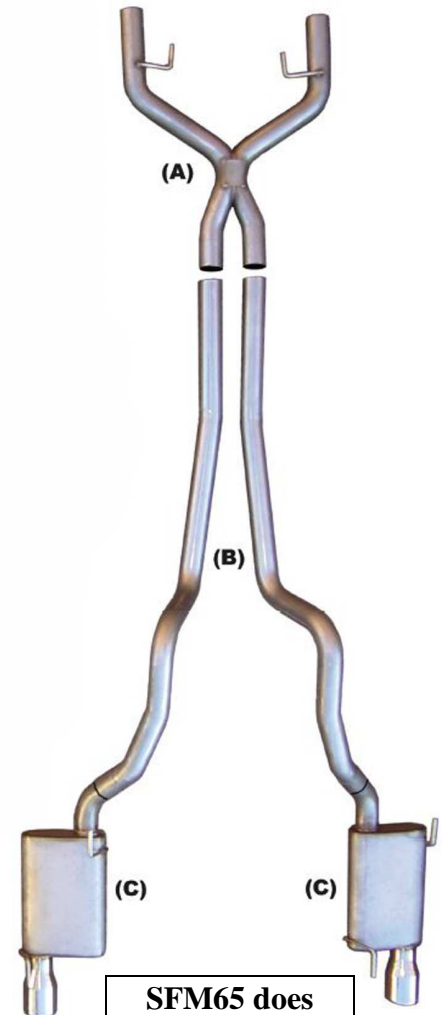

SFM65 does not include this Axle-back System

Now it's time to fire up that muscle car and enjoy your new Pypes Performance Exhaust.

Bumper Cutout Template
V6 Dodge 2005-10
Magnum
Charger

For System:
SMC12

