



STOP READ THIS WARNING!

Make sure you test fit these exhaust components BEFORE any cutting, welding or unnecessary bending is done. Once modified, the components of the system are NOT RETURNABLE.

If you are unsure of the proper installation procedures or fitment, please contact a qualified exhaust shop or call our tech lines toll free at 800-421-3890 or visit our installation gallery at: www.pypesexhaust.com/install

One of our experienced exhaust techs will be glad to assist you in any way. Thanks and enjoy you new...

Pypes Performance Exhaust!

SCROLL DOWN FOR INSTRUCTIONS




SFM79 / SFM79B

409 Stainless Steel Mid-muffler Cat-back exhaust system for 2011-14 Ford V6 Mustangs



Pypes Performance Exhaust
2705 Clemens Rd B103 Hatfield, PA 19440

Thanks again for purchasing your new stainless steel Pypes Performance Exhaust 2011-14 Ford Mustang V6. Please be sure to confirm all the components in the kit were received in your shipment before beginning installation. If you find any components missing, please contact our office at 800-421-3890 for replacement. Installation of these kits will require a few simple tools: jack stands, 13mm & 15mm wrenches, cutting device and penetrating oil. For a quicker and tighter installation, air tools are recommended. Technical assistance is available both online at www.pypesexhaust.com or 800-421-3890.

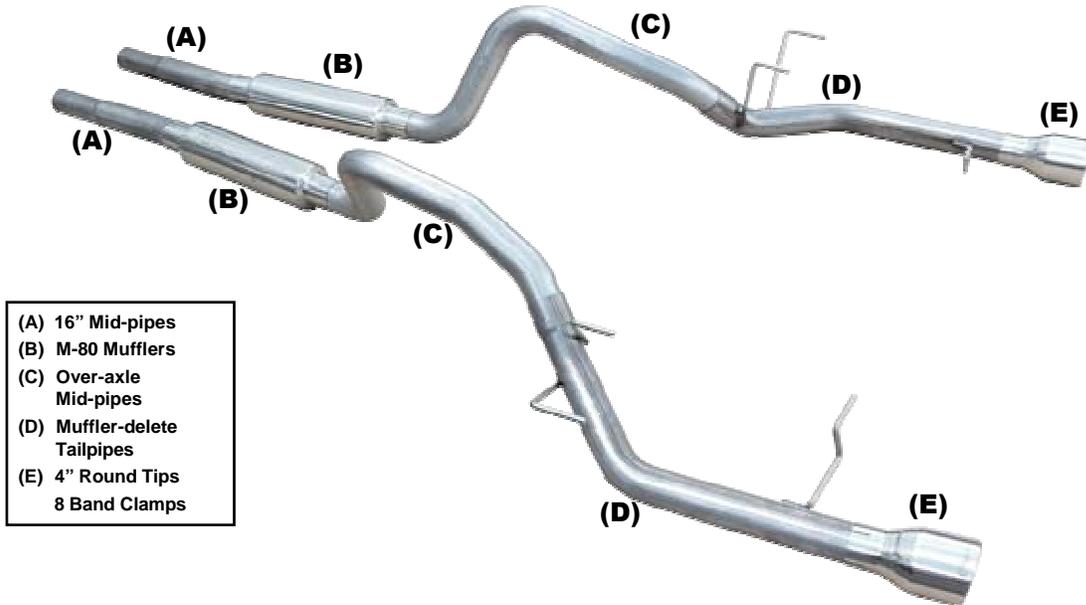

PLEASE TRY INSTALLING OUR WAY FIRST!

1. Begin by placing the vehicle on a lift or four jack stands at maximum height. This will aid in an easier installation.
 2. Unbolt the existing system from just behind the factory x-pipe using a 15mm wrench on the band clamps. Loosen the clamps at the factory axle-backs with a 15mm wrench. Now remove the factory mid-pipes. Last, unbolt the factory muffler hangers using a 13 mm wrench and drop the axle-backs from the vehicle.
 3. You can now re-install the four axle back hangers on to the frame rails. Leave the bolts loose until the entire system is installed.
 4. It's time to install your new Cat-back system. Begin by installing the two 16" slight bent pipes to the factory x-pipe (straight end towards the x-pipe and slight bend towards the mufflers) using the factory band clamps. Snug the bolts with a 15 mm socket but do not tighten all the way at this time.
 5. Next install the new M-80 cylindrical mufflers onto the short pipe (slight bend towards the mufflers and the straight portion into the clamps at the h-pipe). The HVC21 band clamps will be used at both the inlet and outlet. These will appear to be very close to the drive shaft.
 6. Next, install the over the axle portion on the mid-pipes, and slide the axle-back muffler delete tailpipe wire forms into the factory muffler hangers. Use an HVC21 band clamp at the connection between the mid-pipes and the tailpipes.
 7. Finally, slide the EVT52 tips on to the tailpipes. Clamp the tip on using a HVC21 band clamp.
 8. Finish the system by making all your final adjustments to position the mid pipes, mufflers and tailpipes. Now tighten all the band clamps. The use of air tools is highly recommended for this step.
- Note:** When tightening the HVC21 clamp, make sure the I-block in the center of the clamp is against the head of the bolt. Failure to do so will result in the clamps not tightening properly or the I-blocks break.
9. Check all clamped joints periodically as they may come loose.

Note: If you find the new tips are not aligned properly in the bumper cutouts, you may need to adjust your mid-pipes by loosening the two band clamps located where your factory x-pipe meets the mid-pipes. A slight rotation of the mid pipes will allow for the best fit.

Now it's time to fire up that muscle car and enjoy your new Pypes Performance Exhaust.