



## STOP READ THIS WARNING!

Make sure you test fit these exhaust components BEFORE any cutting, welding or unnecessary bending is done. Once modified, the components of the system are NOT RETURNABLE.

If you are unsure of the proper installation procedures or fitment, please contact a qualified exhaust shop or call our tech lines toll free at 800-421-3890 or visit our installation gallery at: [www.pypesexhaust.com/install](http://www.pypesexhaust.com/install)

One of our experienced exhaust techs will be glad to assist you in any way. Thanks and enjoy you new...

Pypes Performance Exhaust!

SCROLL DOWN FOR INSTRUCTIONS



## SFM96MH SFM96MHB SFM96MX SFM96MXB

SFM96MH: 2024 Mustang GT H-Bomb Cat Back with 4" Tip

SFM96MX: 2024 Mustang GT X-Bomb Cat Back with 4" Tip




2705 Clemens Rd B103 Hatfield, PA 19440  
www.pypesexhaust.com 800-421-3890

Thank you for purchasing your Pypes Performance Exhaust catback system for your 2024 GT. Please take the time now to review these installation instructions and confirm that all the components in the kit were received in your shipment before you begin disassembly of your car. If you find a component missing or have questions about the installation please contact our technical department at [tech@pypesexhaust.com](mailto:tech@pypesexhaust.com) or through our live chat room found on the home page of the Pypes website at [www.pypesexhaust.com](http://www.pypesexhaust.com).

### BILL OF MATERIALS

- 2 PVA12 Adapter
- 1 HFM96/XFM96 Mid-pipe
- 1 TFM Tailpipe Set
- 6 HVC24 Band Clamps
- 2 EVT57 or EVT57B Tips

1. Begin by placing the vehicle on a lift or four jack stands at maximum height.
2. Unbolt your factory system cat-back by loosening the two butt connect clamps using a 15mm socket. Retain these clamps because they will be reused later in the installation.
3. Once these clamps are loose the factory system can be removed in one piece. The use of a penetrating lubricant on the factory rubber insulators will aid in this step. There is no cutting required.
4. Now it's time to start the installation of your new system. Begin by installing the two PVA12 adapters using two HCV24 clamps into the front of the HFM96/XFM96 mid-pipe. Next, install the mid-pipe assembly into the car reusing the two factory butt connect clamps keeping all the clamps loose until final adjustment. Note: the mid-pipe has a support rod welded to the back of the mufflers. This rod should face the ground and mufflers tuck up nicely following the lines in the gas tanks.
5. Next, install the TFM80LF/TFM80RF tailpipe sections into the factory rubber isolators then into the mufflers using two more HVC24 clamps at that muffler. The remaining two tailpipe sections TFM80LR/FTM80RR are easiest to install by running wire form hanger through the factory rubber insulators first and then connecting the slip fit joints. Use the two remaining HVC24 clamps at this connection followed by the tips.
6. Now that everything is installed loosely you can begin the alignment and tightening process. Making sure the mid-pipe is flat and follows the gas tank. Tighten the two clamps forward of the Mid-pipe followed by the factory butt connect clamps.
7. Next tighten the tailpipe sections but only after you have the tips align in the openings of the valance. Tighten the tips and your installation is complete. Note: The use of air tools is highly recommended for these steps.
8. Lastly, start your car and check for exhaust leaks.

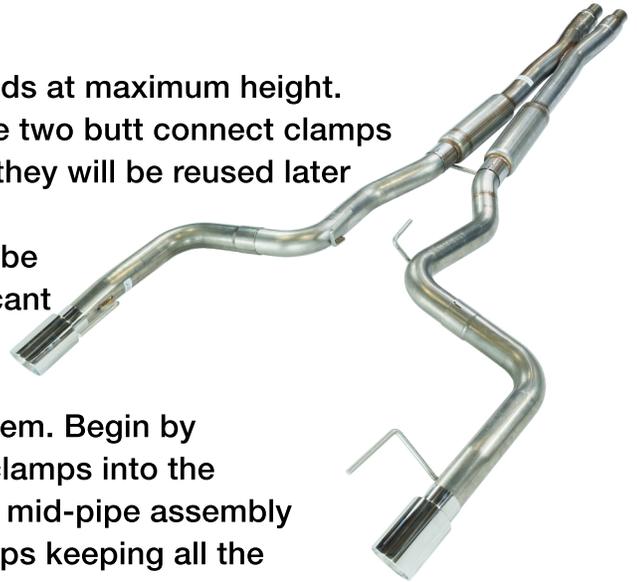

**Now it's time to fire up that muscle car and enjoy your new Pypes Performance Exhaust**